


mit Schnittstelle



# FLEISCHMANN 4235

221731-6

10 4235

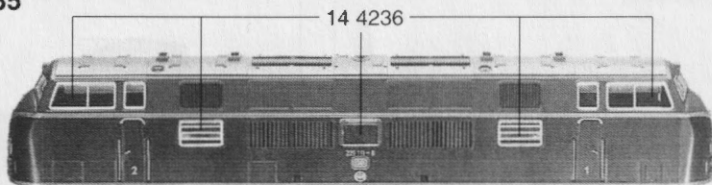

13 4235




71 3506



12 4235



14 4235



70 0406



15 4235



16 4235



6530

62 4235



11 0235




75 4006


75 4006

71 3513

73 0004

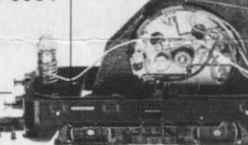


50 4851

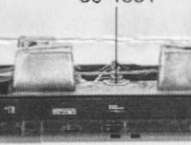

73 0004


19 4817



19 4817




40 42351

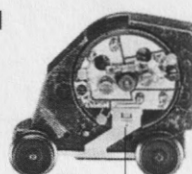


30 0235



61 4927



70 0403




61 4014

64 4401


61 4013

61 4937



6515

38 4001



31 0235



73 0005

76 4007

73 0525

6515

38 4001



- 10 4235 Lokgehäuse kpl.
- 11 0235 Lokrahmen kpl.
- 12 4235 Führerstand einschl. Lokführer u. Lichtleiter
- 13 4235 Führerstand m. Lichtleiter
- 14 4235 Inneneinrichtung
- 14 4236 Fenster (Satz)
- 15 4235 Schlusslichteinsatz rot
- 16 4235 Beschwerung
- 19 4817 Bremsschläuche (Satz)

- 30 0235 Laufdrehgestell kpl. o. Drehgestellrahmen
- 31 0235 Drehgestellrahmen m. 384001
- 38 4001 Kupplungsadapter

- 40 42351 Motordrehgestell m. Motor o. Drehgestellrahmen

- 50 4851 Lötöse

- 61 4013 Stromabnehmer isoliert f. 300235
- 61 4014 Stromabnehmer f. 300235
- 61 4927 Motorstromabnehmer
- 61 4937 Massefeder f. 4042351
- 62 4235 Abdeckblech m. Fassung
- 64 4401 Kontaktpilzgarnitur

- 70 0403 Schraube f. 614013 u. 614014
- 70 0406 Schraube f. 164235
- 71 3506 Schraube f. 144235
- 71 3513 Schraube f. 104235
- 73 0004 Schraube f. 624235
- 73 0005 Schraube f. 310235
- 73 0525 Splint f. 384001
- 75 4006 Steckpuffer
- 76 4007 Richtfeder f. 384001

- 6515 Profi-Steckkupplung
- 6530 Glühlampe (Schraubfassung)









- 50 42351 Motor kpl.
- 50 4607 Anker m. Schwungmasse
- 50 4727 Lagerschild
- 50 4801 Kohlenrohrkappe
- 51 4182 Lokrad o. Z. o. N. isol.
- 51 4183 Lokrad o. Z. m. N. isol.
- 51 4209 Lokrad m. Z. m. N.
- 51 4232 Lokrad m. Z. o. N.
- 52 4006 Achse
- 54 4007 Haftreifen

|         |                                             | Außen-Ø | Zähnezahl | Zähnezahl |
|---------|---------------------------------------------|---------|-----------|-----------|
| 56 4101 | Zahnrad                                     | 19      | 36        | 13        |
| 56 4102 | Zahnrad                                     | 15      | 28        | 13        |
| 56 4112 | Zahnrad                                     | 14      | 26        |           |
| 56 4603 | Ritzel                                      | 6,8     | 12        |           |
| 56 4701 | Sicherungsring klein                        |         |           |           |
| 56 4702 | Sicherungsring groß                         |         |           |           |
| 56 4747 | Distanzscheibe f. Anker<br>(Kollektorseite) |         |           |           |
| 56 4751 | Distanzscheibe f. Anker<br>(Getriebeseite)  |         |           |           |

- 64 4202 Entstörkondensator
- 64 4401 Kontaktpilzgarnitur
- 65 4073 Buchsenleiste f. Schnittstelle
- 66 4002 Stecker f. Schnittstelle
- 70 0313 Schraube f. 50 4727




6519 Kohlen und Federn

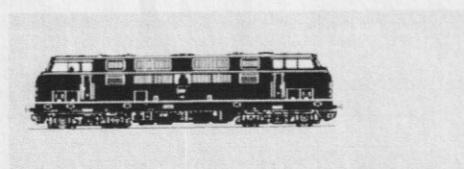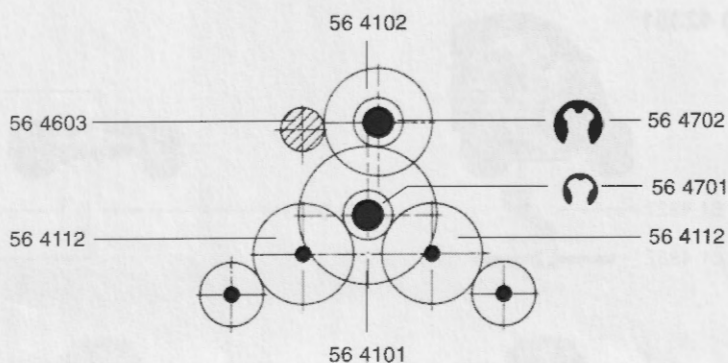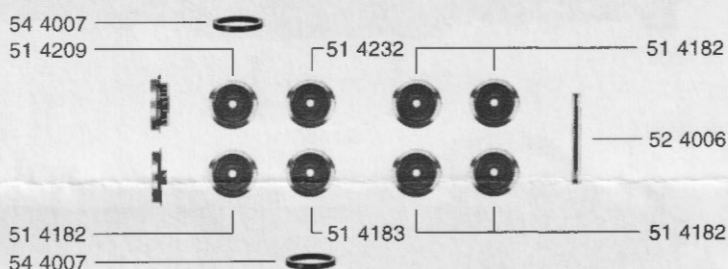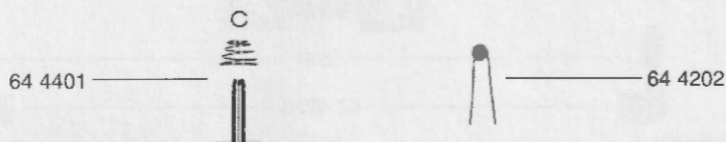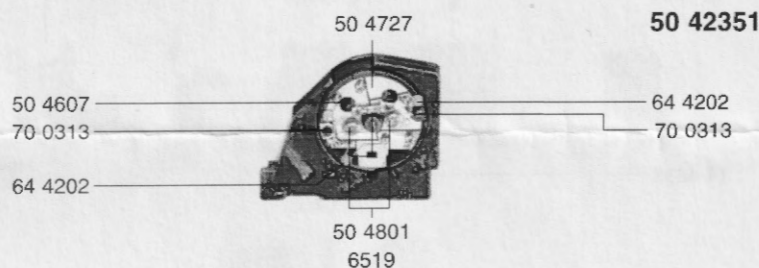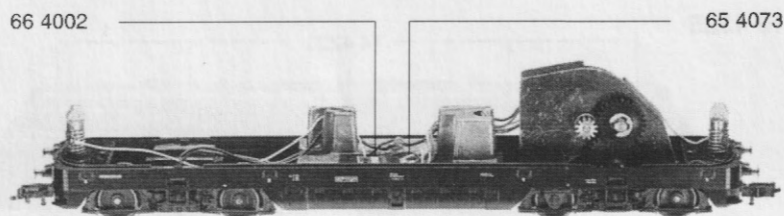


# FLEISCHMANN

## BETRIEBSANLEITUNG

Instructions de service · Istruzioni per la  
manutenzione Handleiding Operating  
Instruction Instrucciones de servicio

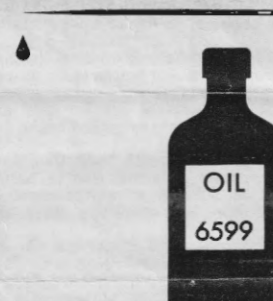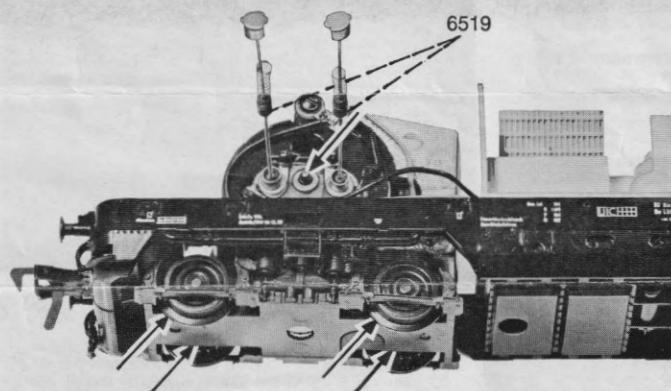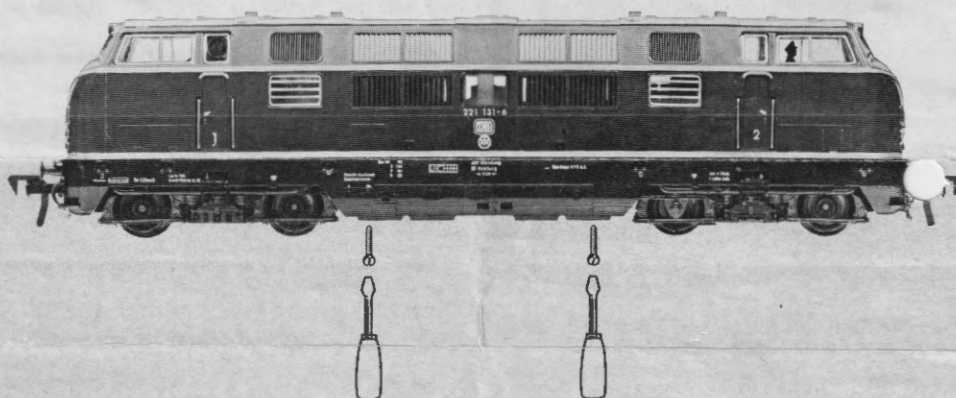

NUR 1 Tropfen  
pro Ölste-  
Smeerpunten  
slechts een  
druppel.  
One drop only  
per oiling point.  
Endroit à huiler,  
une seule goutte.  
Punti di  
lubrificazione.  
Solo una goccia.

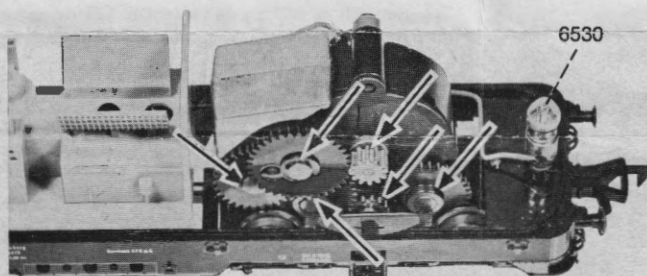

21 203 S 874 Ho Printed in Germany